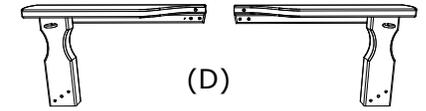# LuxCraft
FINE OUTDOOR FURNITURE

Tools Required
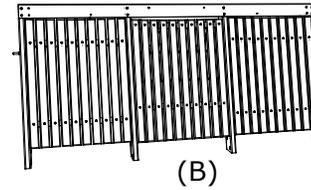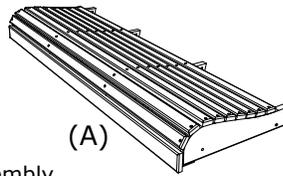
5/32 Hex Key (Included)

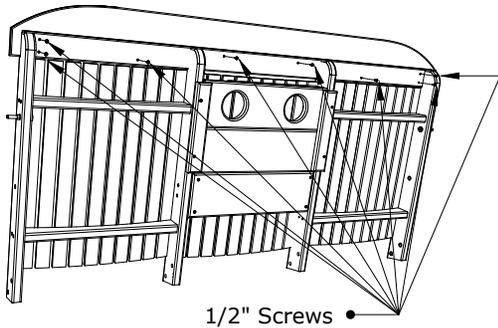#2 Square Drive Bit
(Not Included)

1/2" Wrench
(Not Included)

Hardware
2 - 5/16" x 3 1/2" Stainless Wafer Bolts
10 - 5/16 x 2" Stainless Wafer Bolts
6 - Nuts
10 - Washers
4 - 2" Screws
4 - 1 1/2" Screws
8 - 1/2" Screws
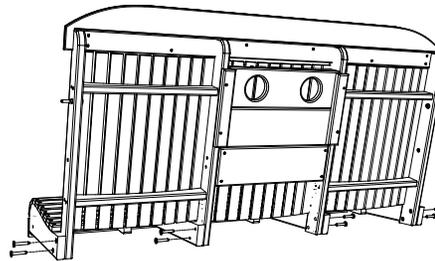1 - 5/32 Hex Key
1 - Set Swing Chains

Parts List
1 - (A) Seat Assembly
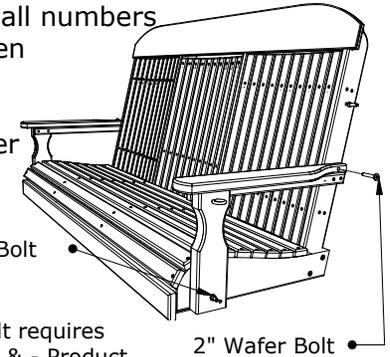1 - (B) Back Assembly
1 - (C) Headboard
2 - (D) Armrest Assemblies

(A)

(B)

(C)

(D)

Inch
0   1   2   3   4   5   6   7

1. Attach (C) Headboard to (B) Back using 8 - 1/2" Screws, be sure to match all numbers & or letters.

1/2" Screws

2. Attach (B) Back Assembly to (A) Seat Assembly using (8-2" Wafer Bolts,)Be sure to match all numbers & or letters, tighten Wafer Bolts with included Hex Key.
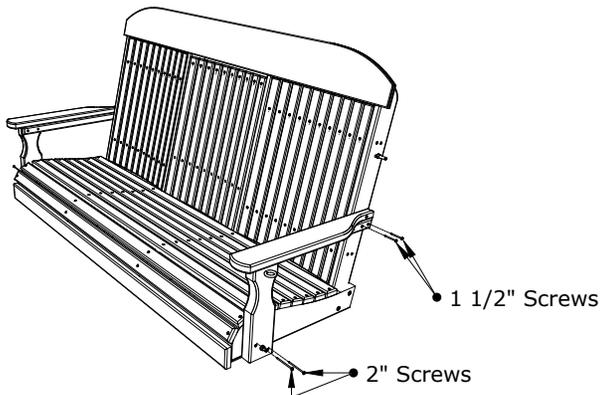
3. Attach (D) Armrest Assemblies using (1 - 2" Wafer Bolt) (1 - 3 1/2" Wafer Bolt) (1 - Washer) & (1- Nut) per side, Be sure to match all numbers & or letters, tighten Wafer Bolt with included Hex Key. insert 3 1/2" Wafer Bolt from inside out.
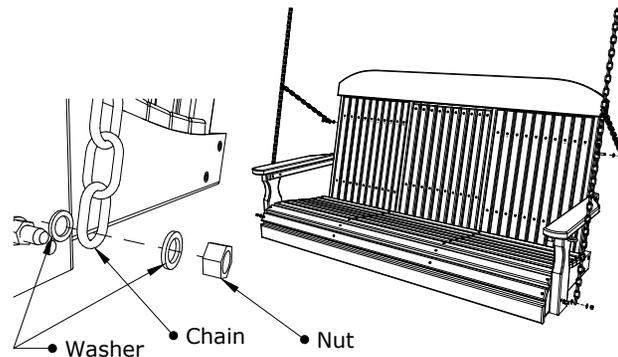
3 1/2" Wafer Bolt

3 1/2" Wafer Head Bolt requires Washer - between nut & - Product

2" Wafer Bolt

4. Install (2-2" Screws)&(2-1 1/2" Screws) per side.

1 1/2" Screws

2" Screws

5. Attach short end of Chain to Back and long end through screw eye to bottom of front upright using (2-Nuts)&(4 - Washers) per side   "Install Washer-Chain-Washer-Nut"

Washer   Chain   Nut

LuxCraft
FINE OUTDOOR FURNITURE

5' Classic Poly Swing Assembly Instructions

10/16/ 2017	R.M.