







Tools Required

- 5/32 Hex Key (Included)
- #2 Square Drive Bit (Not Included)
- 1/2" Wrench (Not Included)


- Hardware**
- 2 - 5/16" x 3 1/2" Stainless Wafer Bolts
 - 8 - 5/16" x 2" Stainless Wafer Bolts
 - 6 - Nuts
 - 10 Washers
 - 4 - 2" Screws
 - 4 - 1 1/2" Screws
 - 1 - Set Swing Chains
 - 1 - 5/32 Hex Key

Parts List


- 1 - (A) Seat
- 1 - (B) Back
- 2 - (C) Armrest's

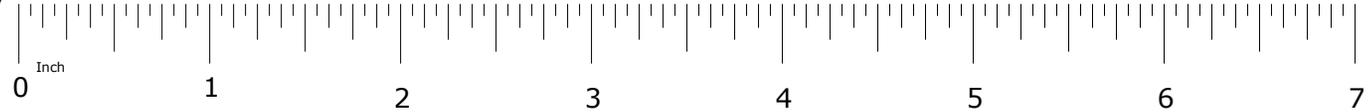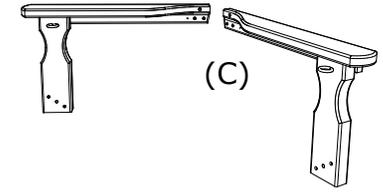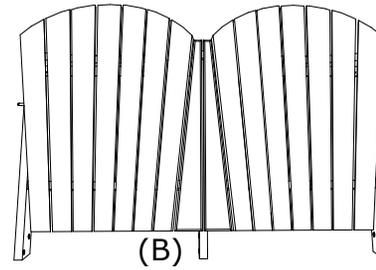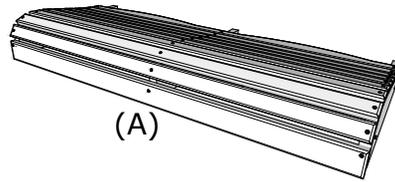


1. Attach (B) Back Assembly to (A) Seat Assembly using 6 - 2" Wafer Bolts, be sure to match all numbers & or letters, tighten Bolts with included Hex Key.

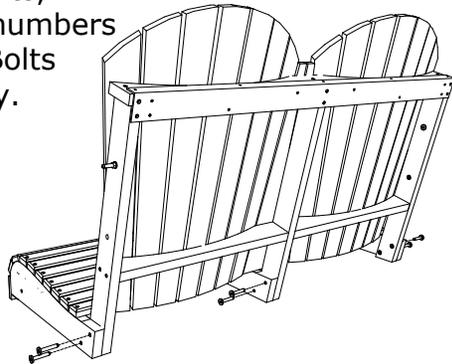

2. Attach (C) Armrest's using 1 - 2" Wafer Bolt 1 - 3 1/2" Wafer Bolt 1 - Washer 1 - Nut 2 - 2" Screws & 2 - 1 1/2" Screws per side, be sure to match all numbers & or letters, tighten Wafer Bolt with included Hex Key.

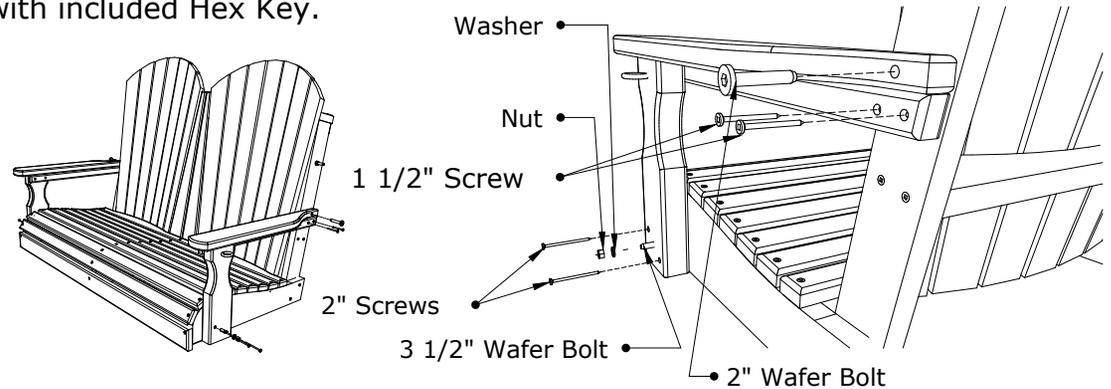

3. Attach short end of chain to Back & long end through screw eye to bottom of front upright. Always use (Washer - Chain - Washer - Nut)

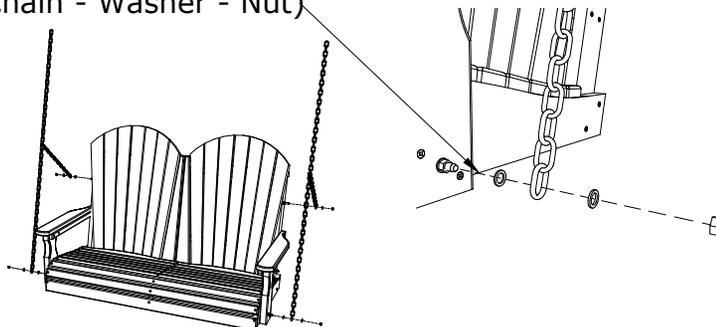

4' Adirondack Poly Swing Assembly Instructions

10/16/ 2017

R.M.